


Plan Key

- You Are Here
- - - Evacuation Route
- ➔ Exit
- Restroom
- Fire Extinguisher
- FA Fire Alarm
- FACP Fire Alarm Control Panel
- Symbol of Accessibility

In Case of Emergency:

- Sound fire alarm.
- Assist persons with disabilities.
- Exit the building using the nearest exit.
Do Not Use Elevators!
- Report to the nearest designated evacuation assembly point.
- Do not re-enter until authorized to do so.

FACP Fire Alarm Control Panel is located in Switch Gear Room #022 on this Level.

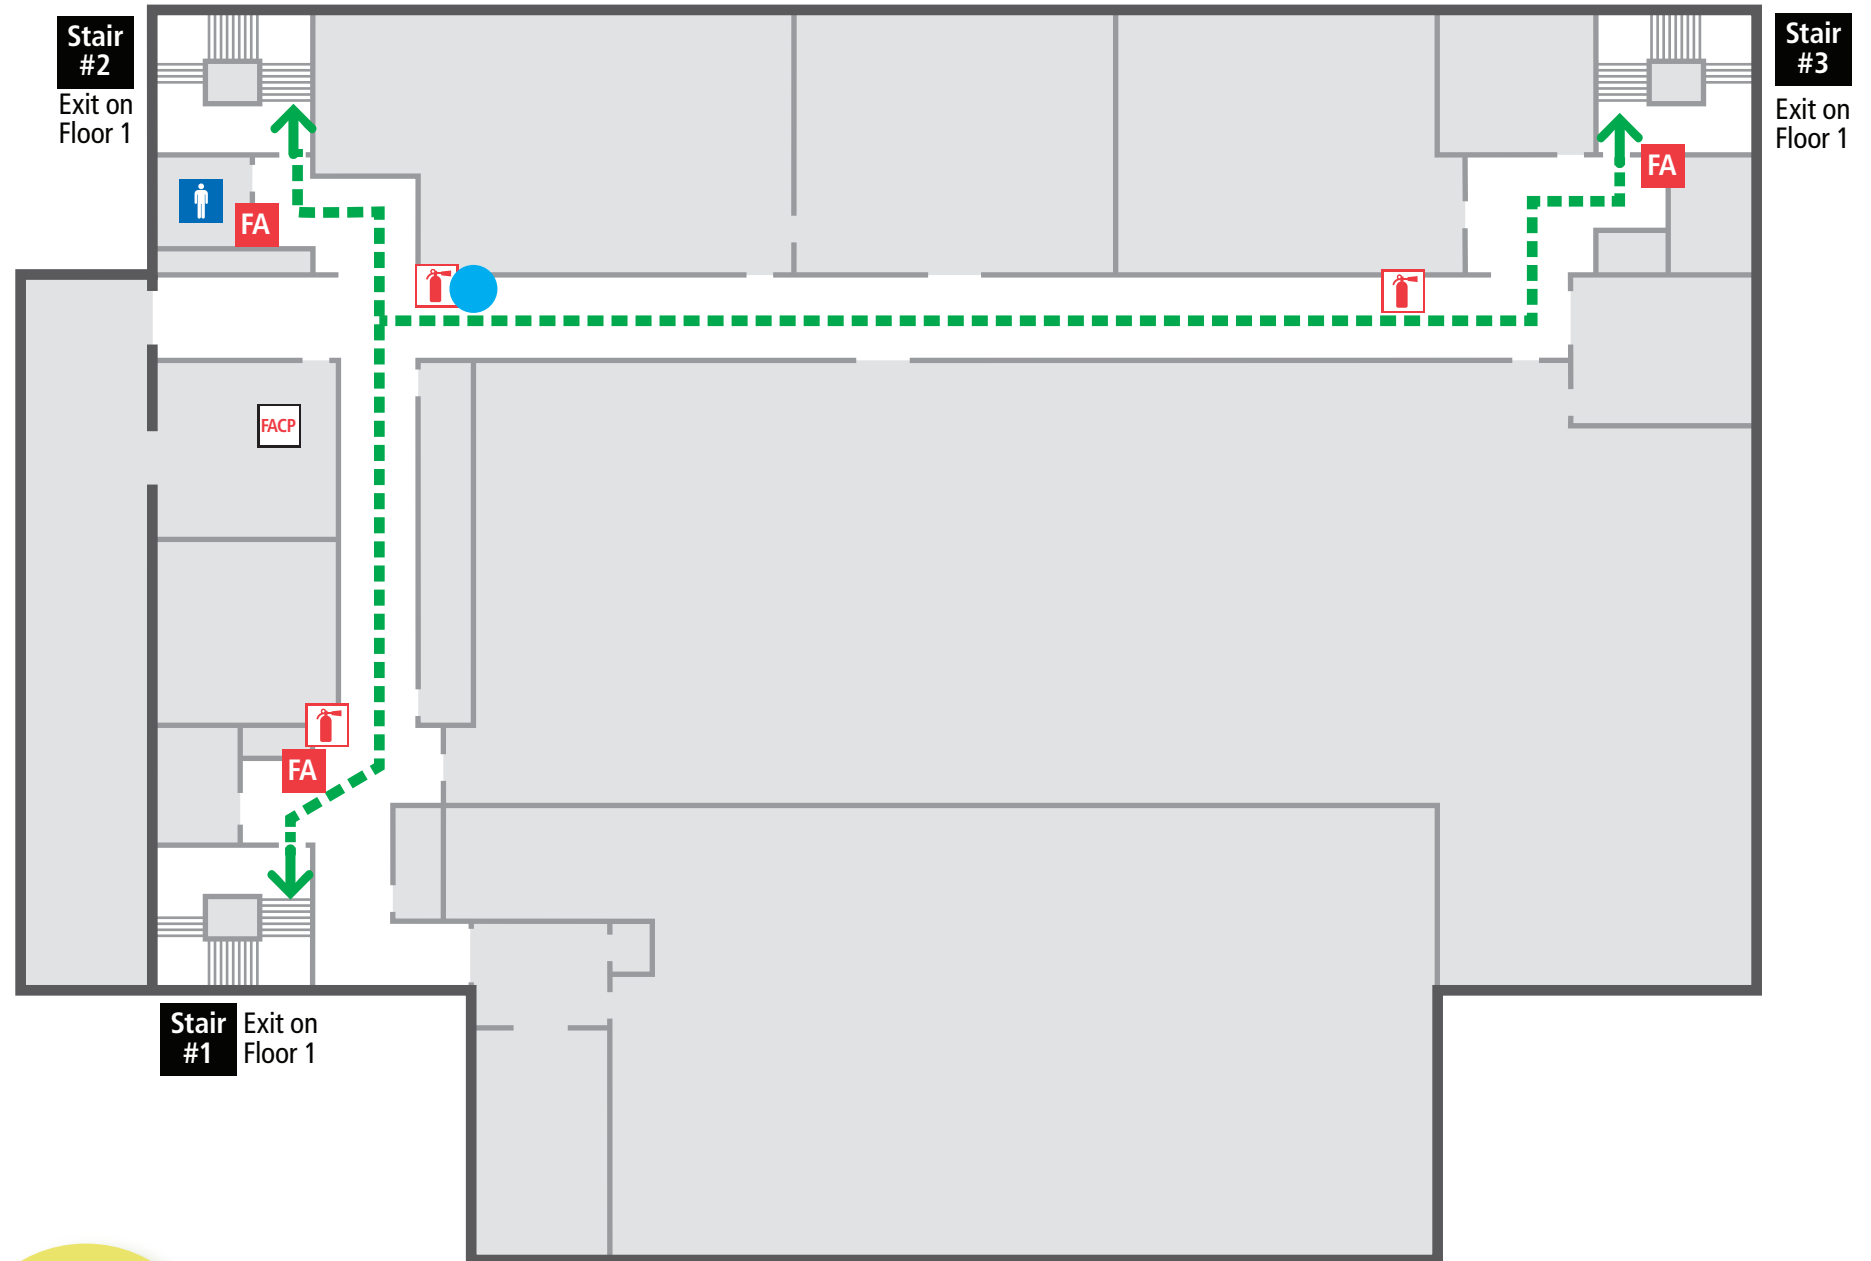

↓
**Evacuation
 Assembly Point:
 Parking Lot
 W-13**


Plan Key

- You Are Here
- - - Evacuation Route
- ➔ Exit
-  Restroom
-  Fire Extinguisher
- FA Fire Alarm
- FACP Fire Alarm Control Panel
-  Symbol of Accessibility

In Case of Emergency:

- Sound fire alarm.
- Assist persons with disabilities.
- Exit the building using the nearest exit.
Do Not Use Elevators!
- Report to the nearest designated evacuation assembly point.
- Do not re-enter until authorized to do so.

FACP Fire Alarm Control Panel is located in Switch Gear Room #022 on this Level.

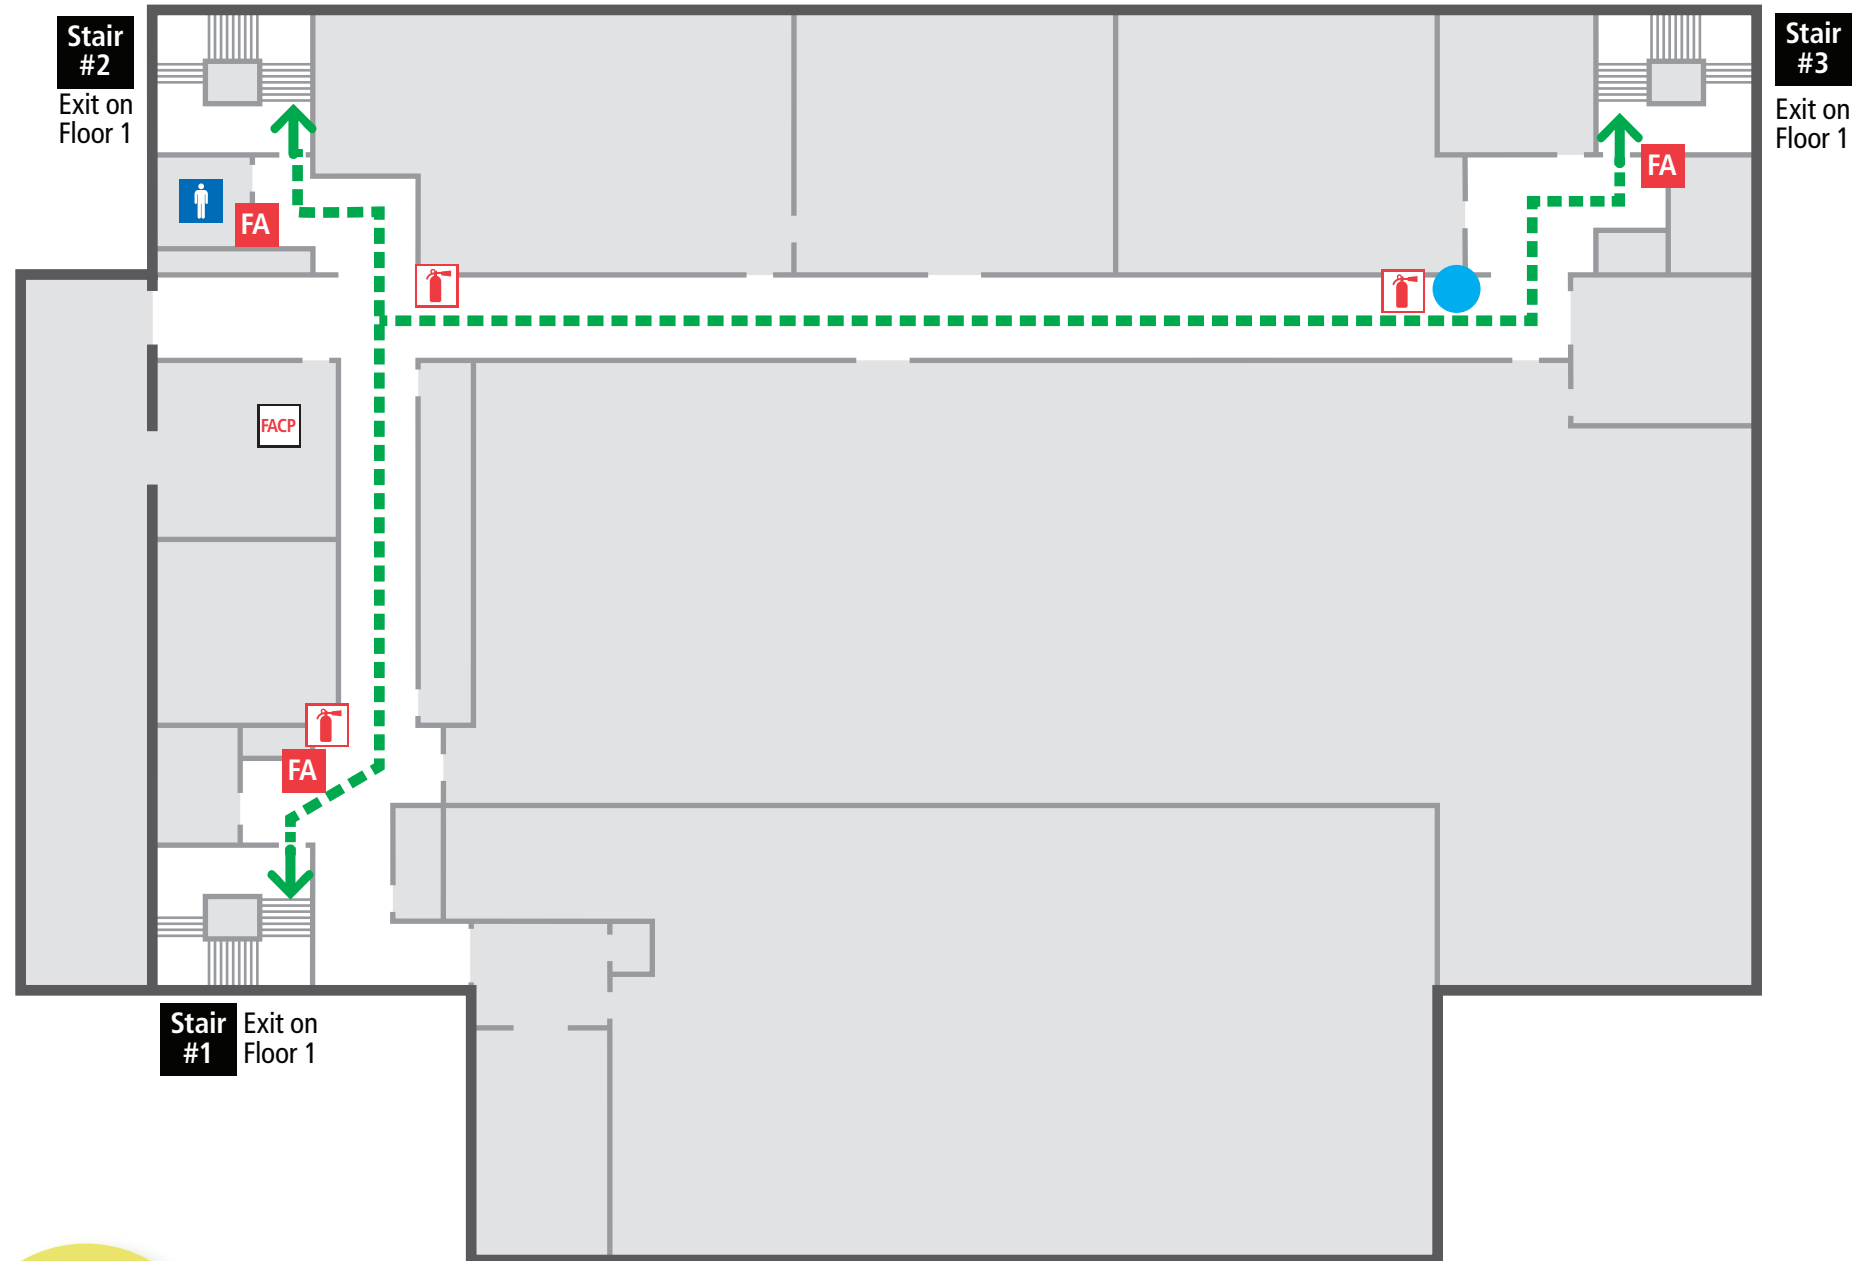



**Evacuation
Assembly Point:
Parking Lot
W-13**

Plan Key


-  You Are Here
-  Evacuation Route
-  Exit
-  Restroom
-  Fire Extinguisher
-  Fire Alarm
-  Fire Alarm Control Panel
-  Symbol of Accessibility

In Case of Emergency:

- Sound fire alarm.
- Assist persons with disabilities.
- Exit the building using the nearest exit.
Do Not Use Elevators!
- Report to the nearest designated evacuation assembly point.
- Do not re-enter until authorized to do so.

 Fire Alarm Control Panel is located in Switch Gear Room #022 on Basement Level.

NE 40TH STREET

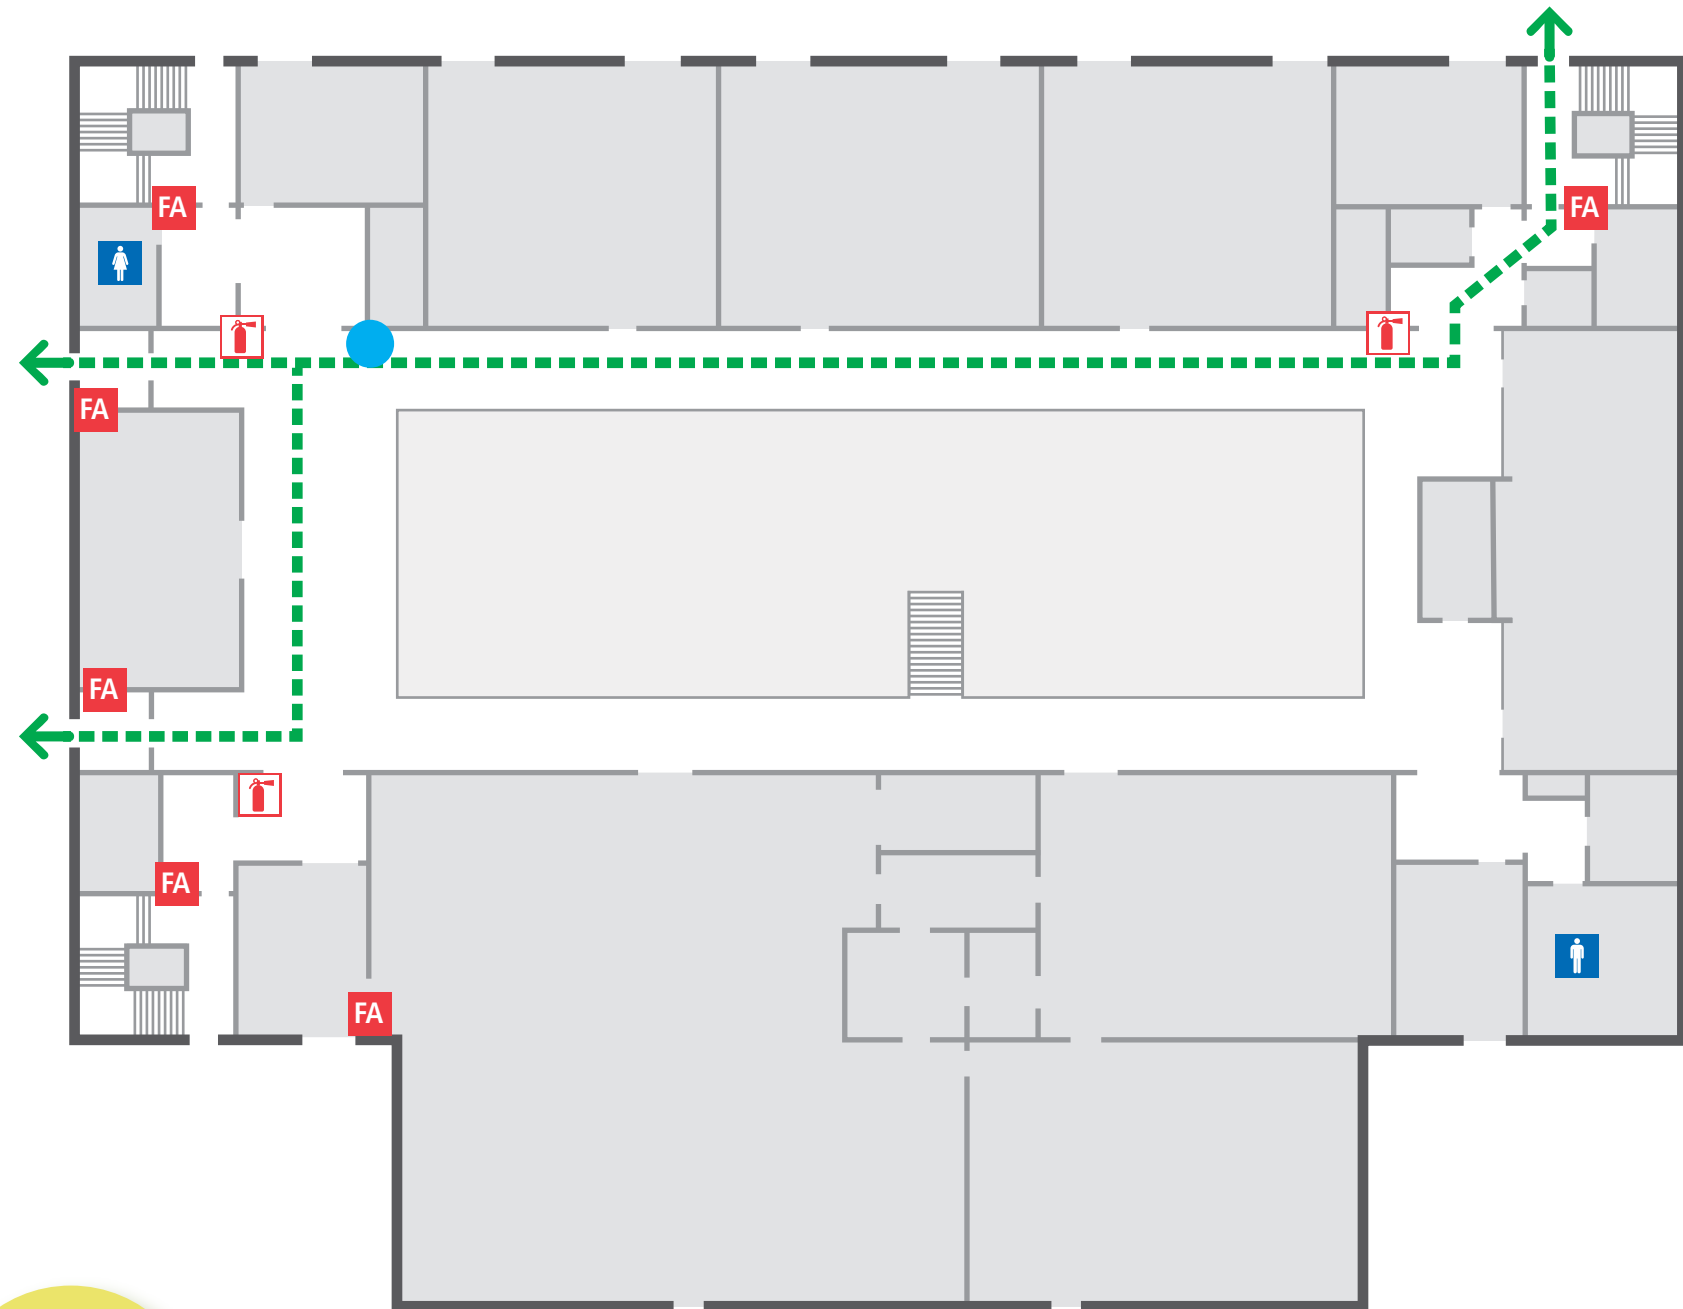


↙
Evacuation
Assembly Point:
Parking Lot
W-13

Plan Key


-  You Are Here
-  Evacuation Route
-  Exit
-  Restroom
-  Fire Extinguisher
-  Fire Alarm
-  Fire Alarm Control Panel
-  Symbol of Accessibility

In Case of Emergency:

- Sound fire alarm.
- Assist persons with disabilities.
- Exit the building using the nearest exit.
Do Not Use Elevators!
- Report to the nearest designated evacuation assembly point.
- Do not re-enter until authorized to do so.

 Fire Alarm Control Panel is located in Switch Gear Room #022 on Basement Level.


NE 40TH STREET

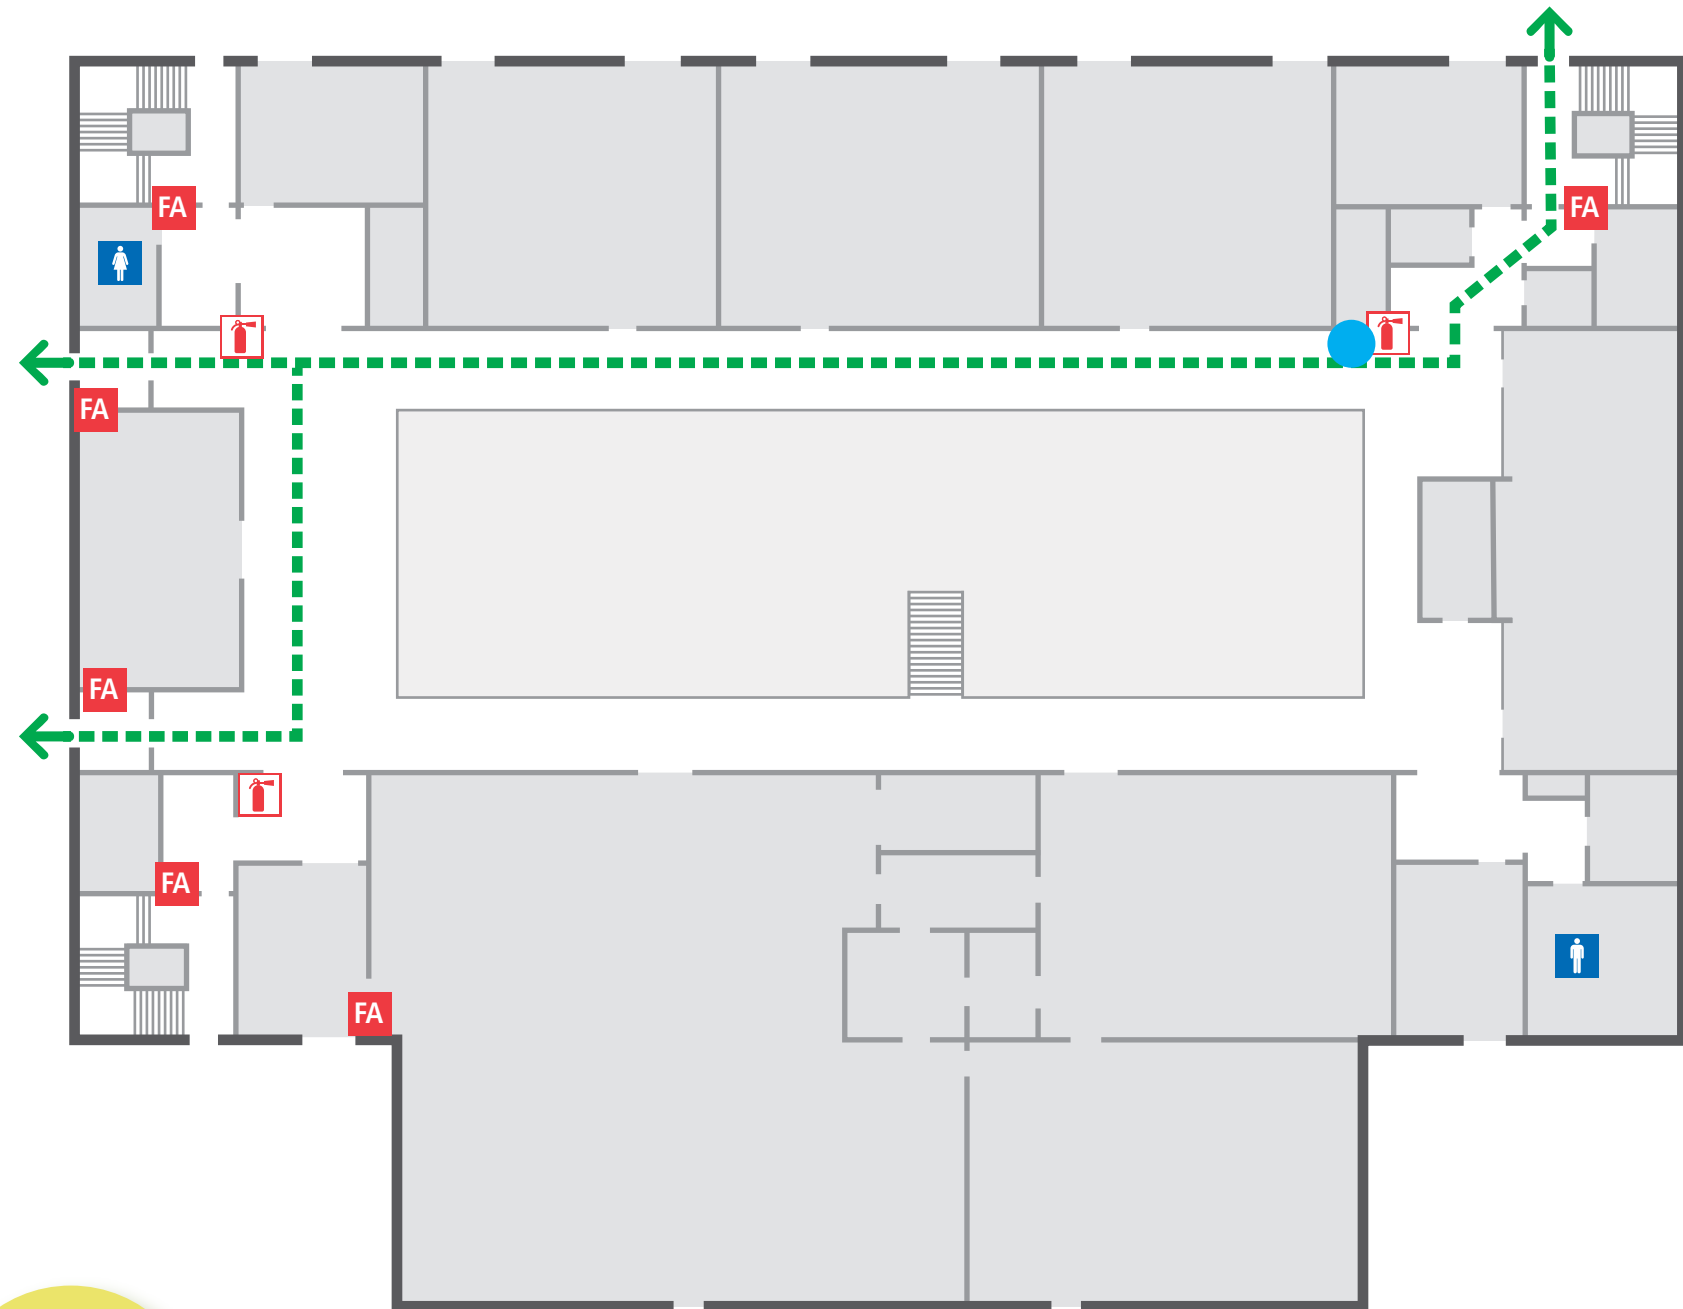

↙
Evacuation
Assembly Point:
Parking Lot
W-13

Plan Key


- You Are Here
- - - Evacuation Route
- ➔ Exit
- Restroom
- Fire Extinguisher
- FA Fire Alarm
- FACP Fire Alarm Control Panel
- Symbol of Accessibility

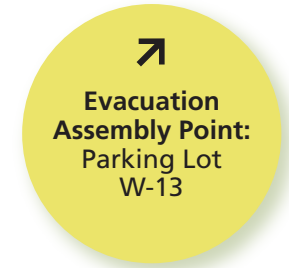

In Case of Emergency:

- Sound fire alarm.
- Assist persons with disabilities.
- Exit the building using the nearest exit.
Do Not Use Elevators!
- Report to the nearest designated evacuation assembly point.
- Do not re-enter until authorized to do so.

FACP Fire Alarm Control Panel is located in Switch Gear Room #022 on Basement Level.

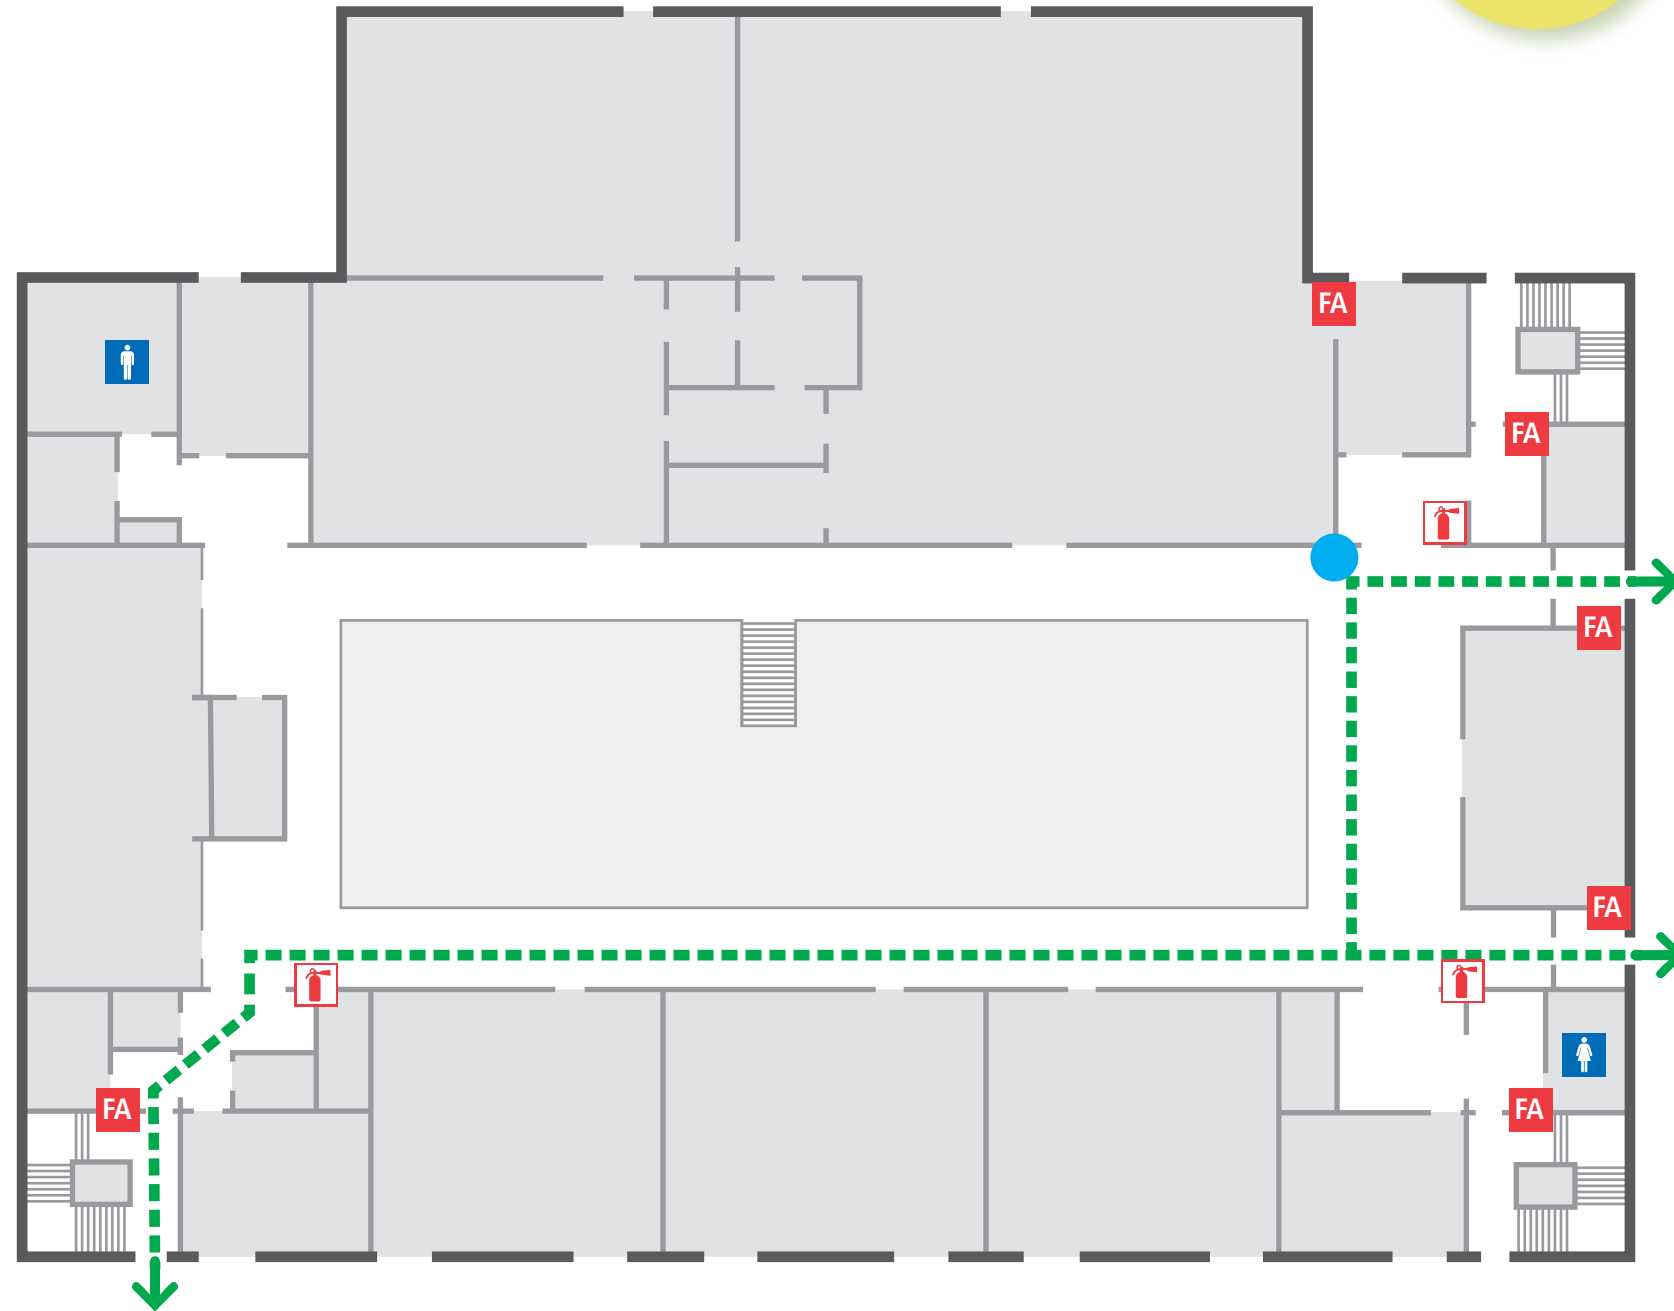


Plan Key

-  You Are Here
-  Evacuation Route
-  Exit
-  Restroom
-  Fire Extinguisher
-  Fire Alarm
-  Fire Alarm Control Panel
-  Symbol of Accessibility

In Case of Emergency:

- Sound fire alarm.
- Assist persons with disabilities.
- Exit the building using the nearest exit.
Do Not Use Elevators!
- Report to the nearest designated evacuation assembly point.
- Do not re-enter until authorized to do so.

 Fire Alarm Control Panel is located in Switch Gear Room #022 on Basement Level.

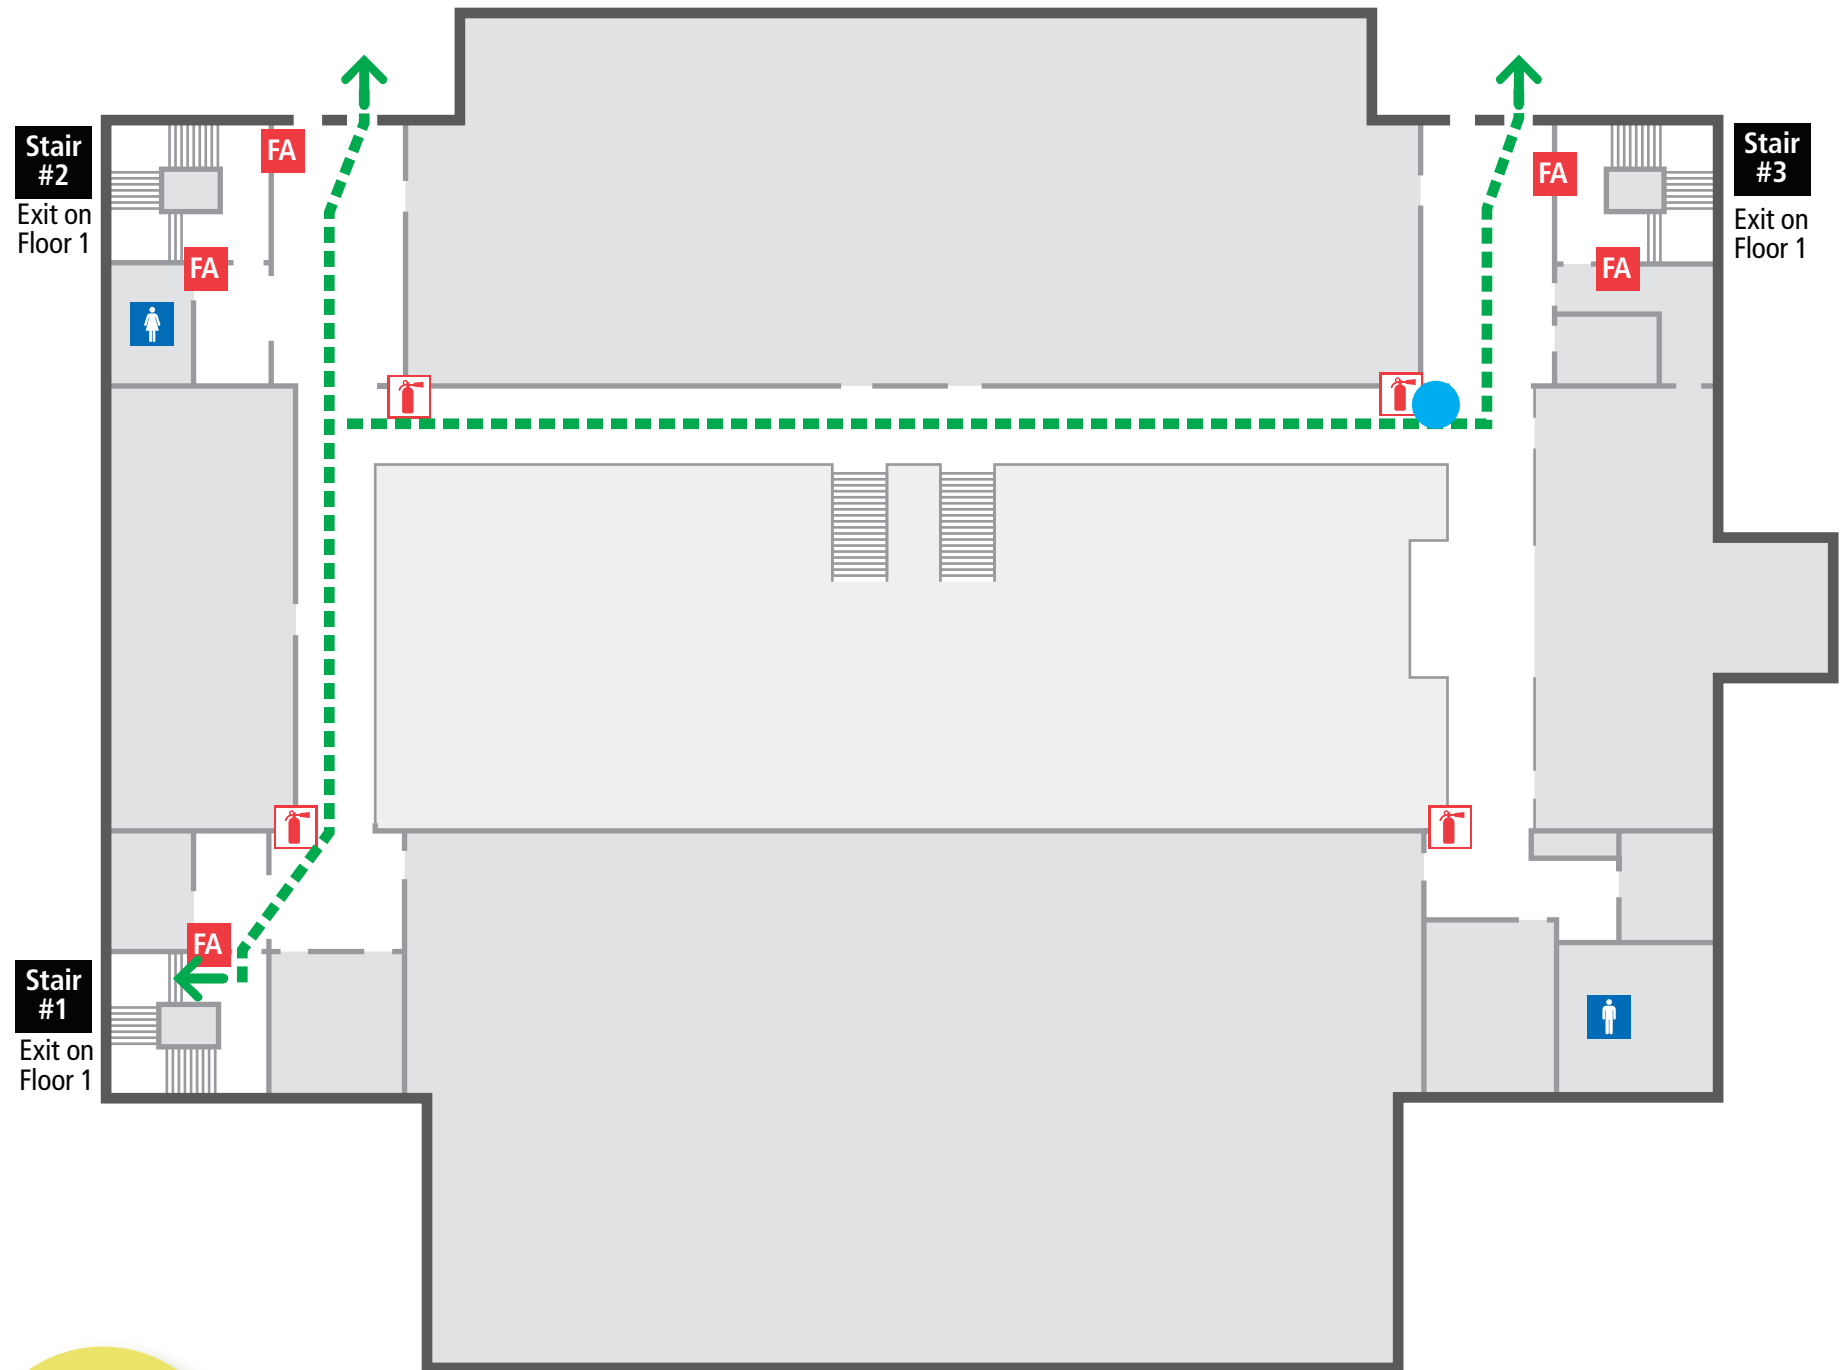

↙
**Evacuation
Assembly Point:
Parking Lot
W-13**


Plan Key

- You Are Here
- - - Evacuation Route
- Exit
-  Restroom
-  Fire Extinguisher
- FA Fire Alarm
- FACP Fire Alarm Control Panel
-  Symbol of Accessibility

In Case of Emergency:

- Sound fire alarm.
- Assist persons with disabilities.
- Exit the building using the nearest exit.
Do Not Use Elevators!
- Report to the nearest designated evacuation assembly point.
- Do not re-enter until authorized to do so.

FACP Fire Alarm Control Panel is located in Switch Gear Room #022 on Basement Level.

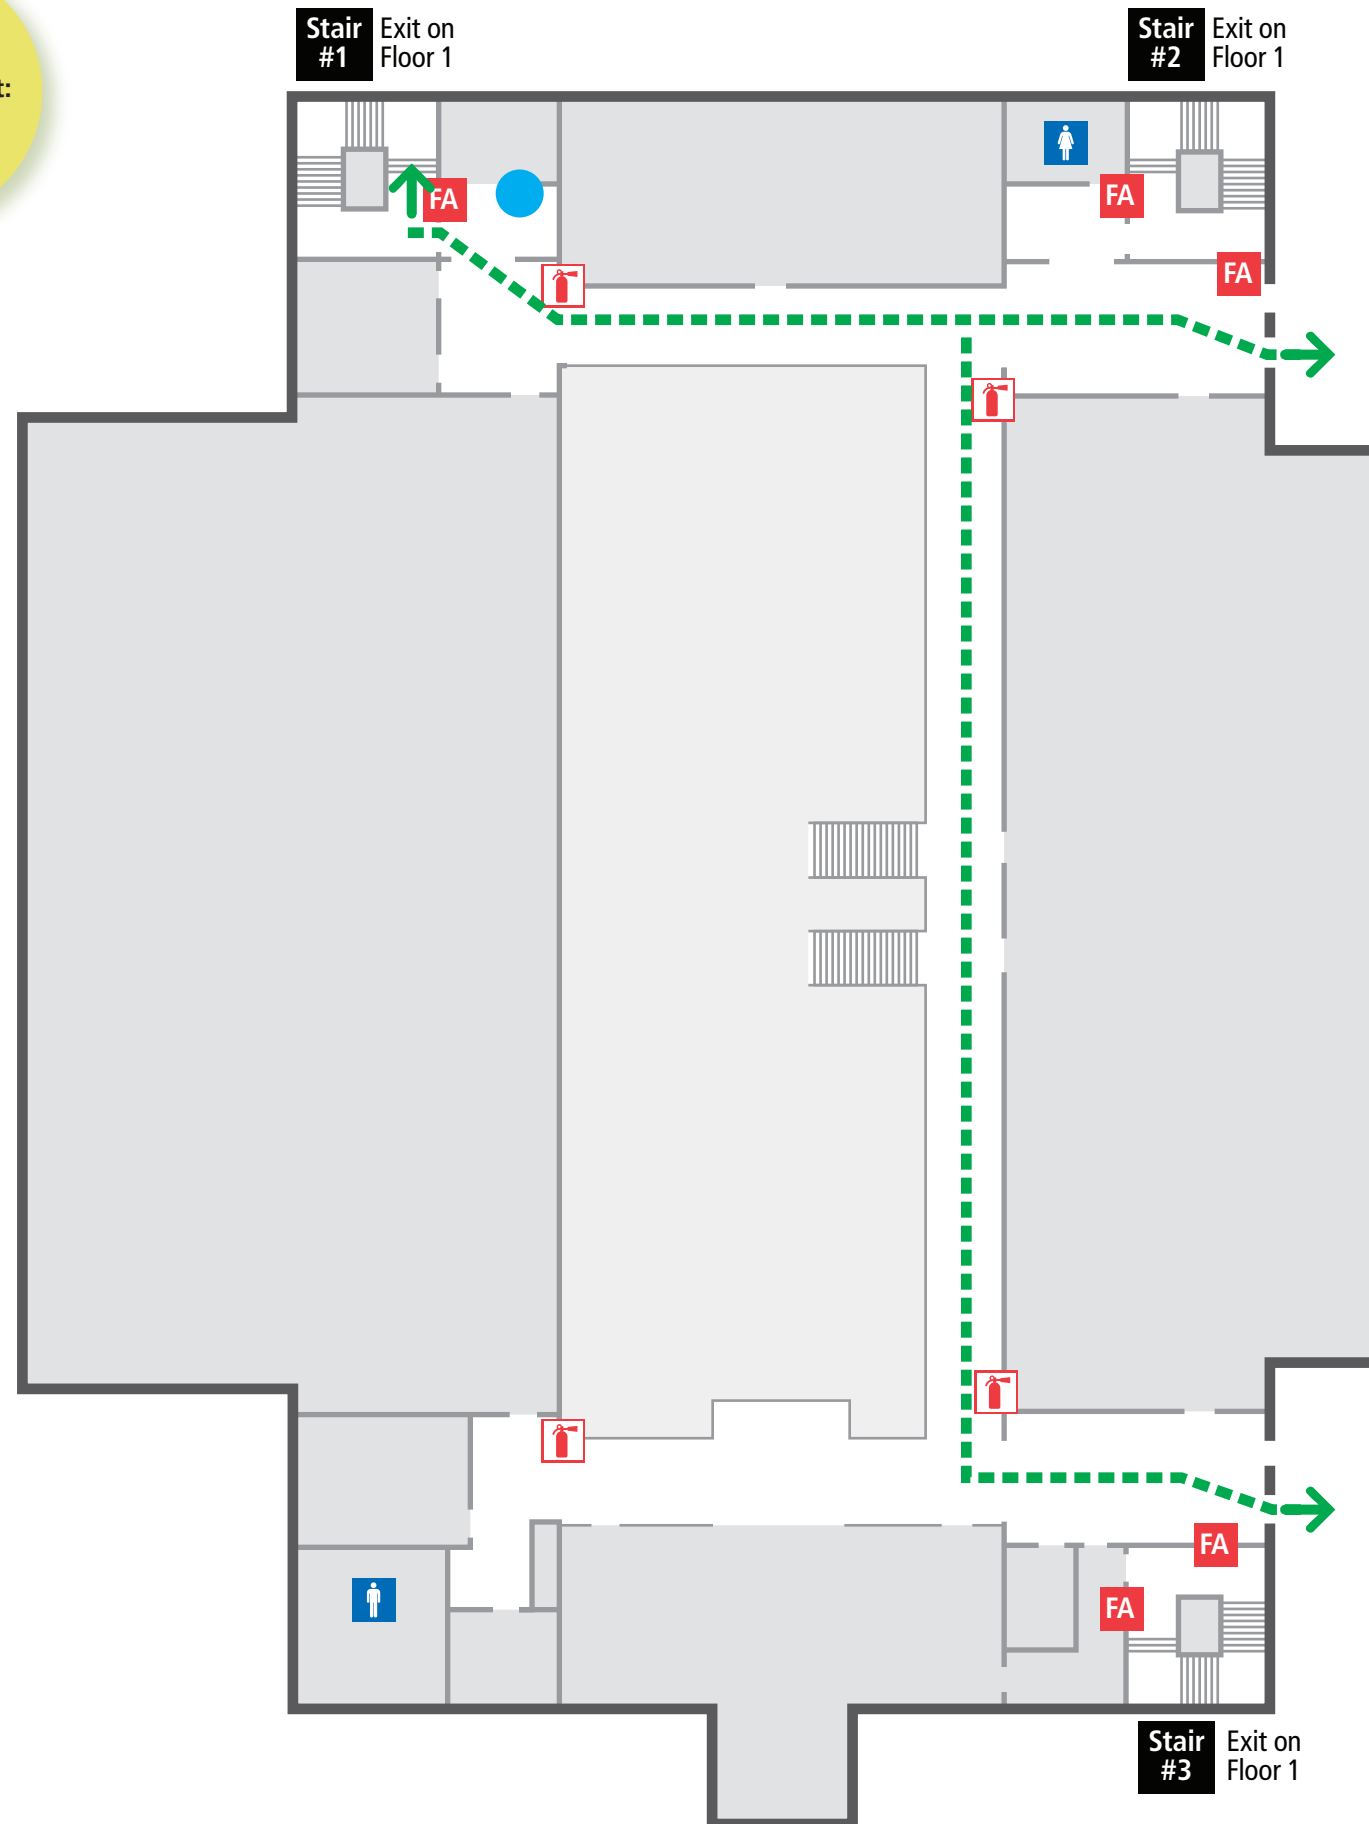


Plan Key

- You Are Here
- - - Evacuation Route
- ➔ Exit
- Restroom
- Fire Extinguisher
- FA Fire Alarm
- FACP Fire Alarm Control Panel
- Symbol of Accessibility

In Case of Emergency:

- Sound fire alarm.
- Assist persons with disabilities.
- Exit the building using the nearest exit.
Do Not Use Elevators!
- Report to the nearest designated evacuation assembly point.
- Do not re-enter until authorized to do so.

FACP Fire Alarm Control Panel is located in Switch Gear Room #022 on Basement Level.

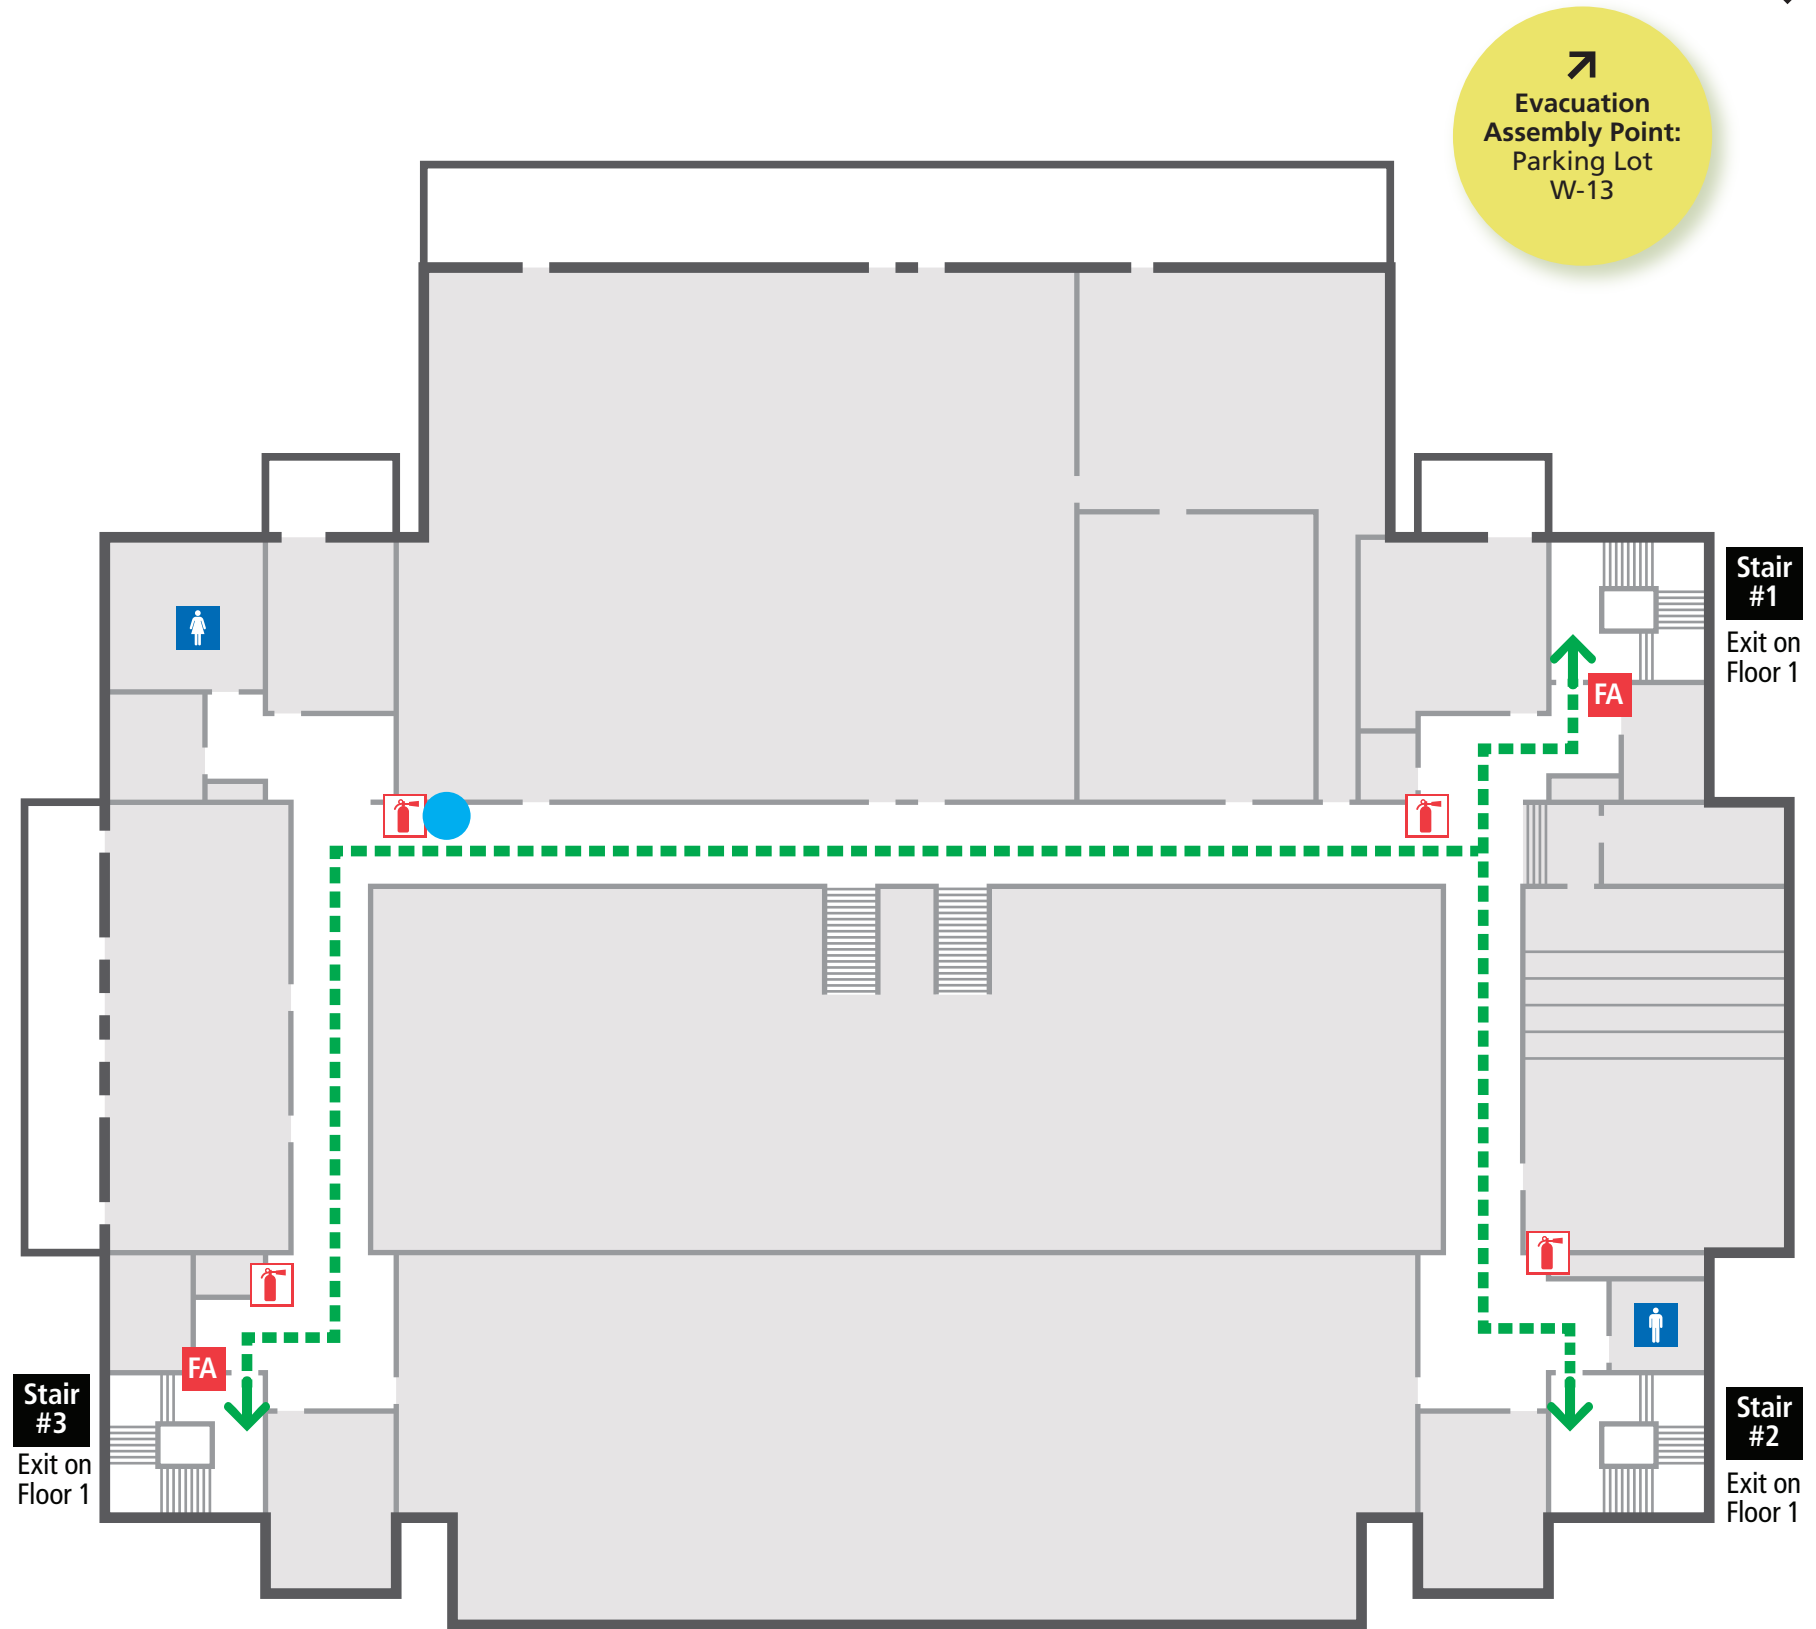


Plan Key

- You Are Here
- - - Evacuation Route
- ➔ Exit
-  Restroom
-  Fire Extinguisher
- FA Fire Alarm
- FACP Fire Alarm Control Panel
-  Symbol of Accessibility

In Case of Emergency:

- Sound fire alarm.
- Assist persons with disabilities.
- Exit the building using the nearest exit.
Do Not Use Elevators!
- Report to the nearest designated evacuation assembly point.
- Do not re-enter until authorized to do so.

FACP Fire Alarm Control Panel is located in Switch Gear Room #022 on Basement Level.

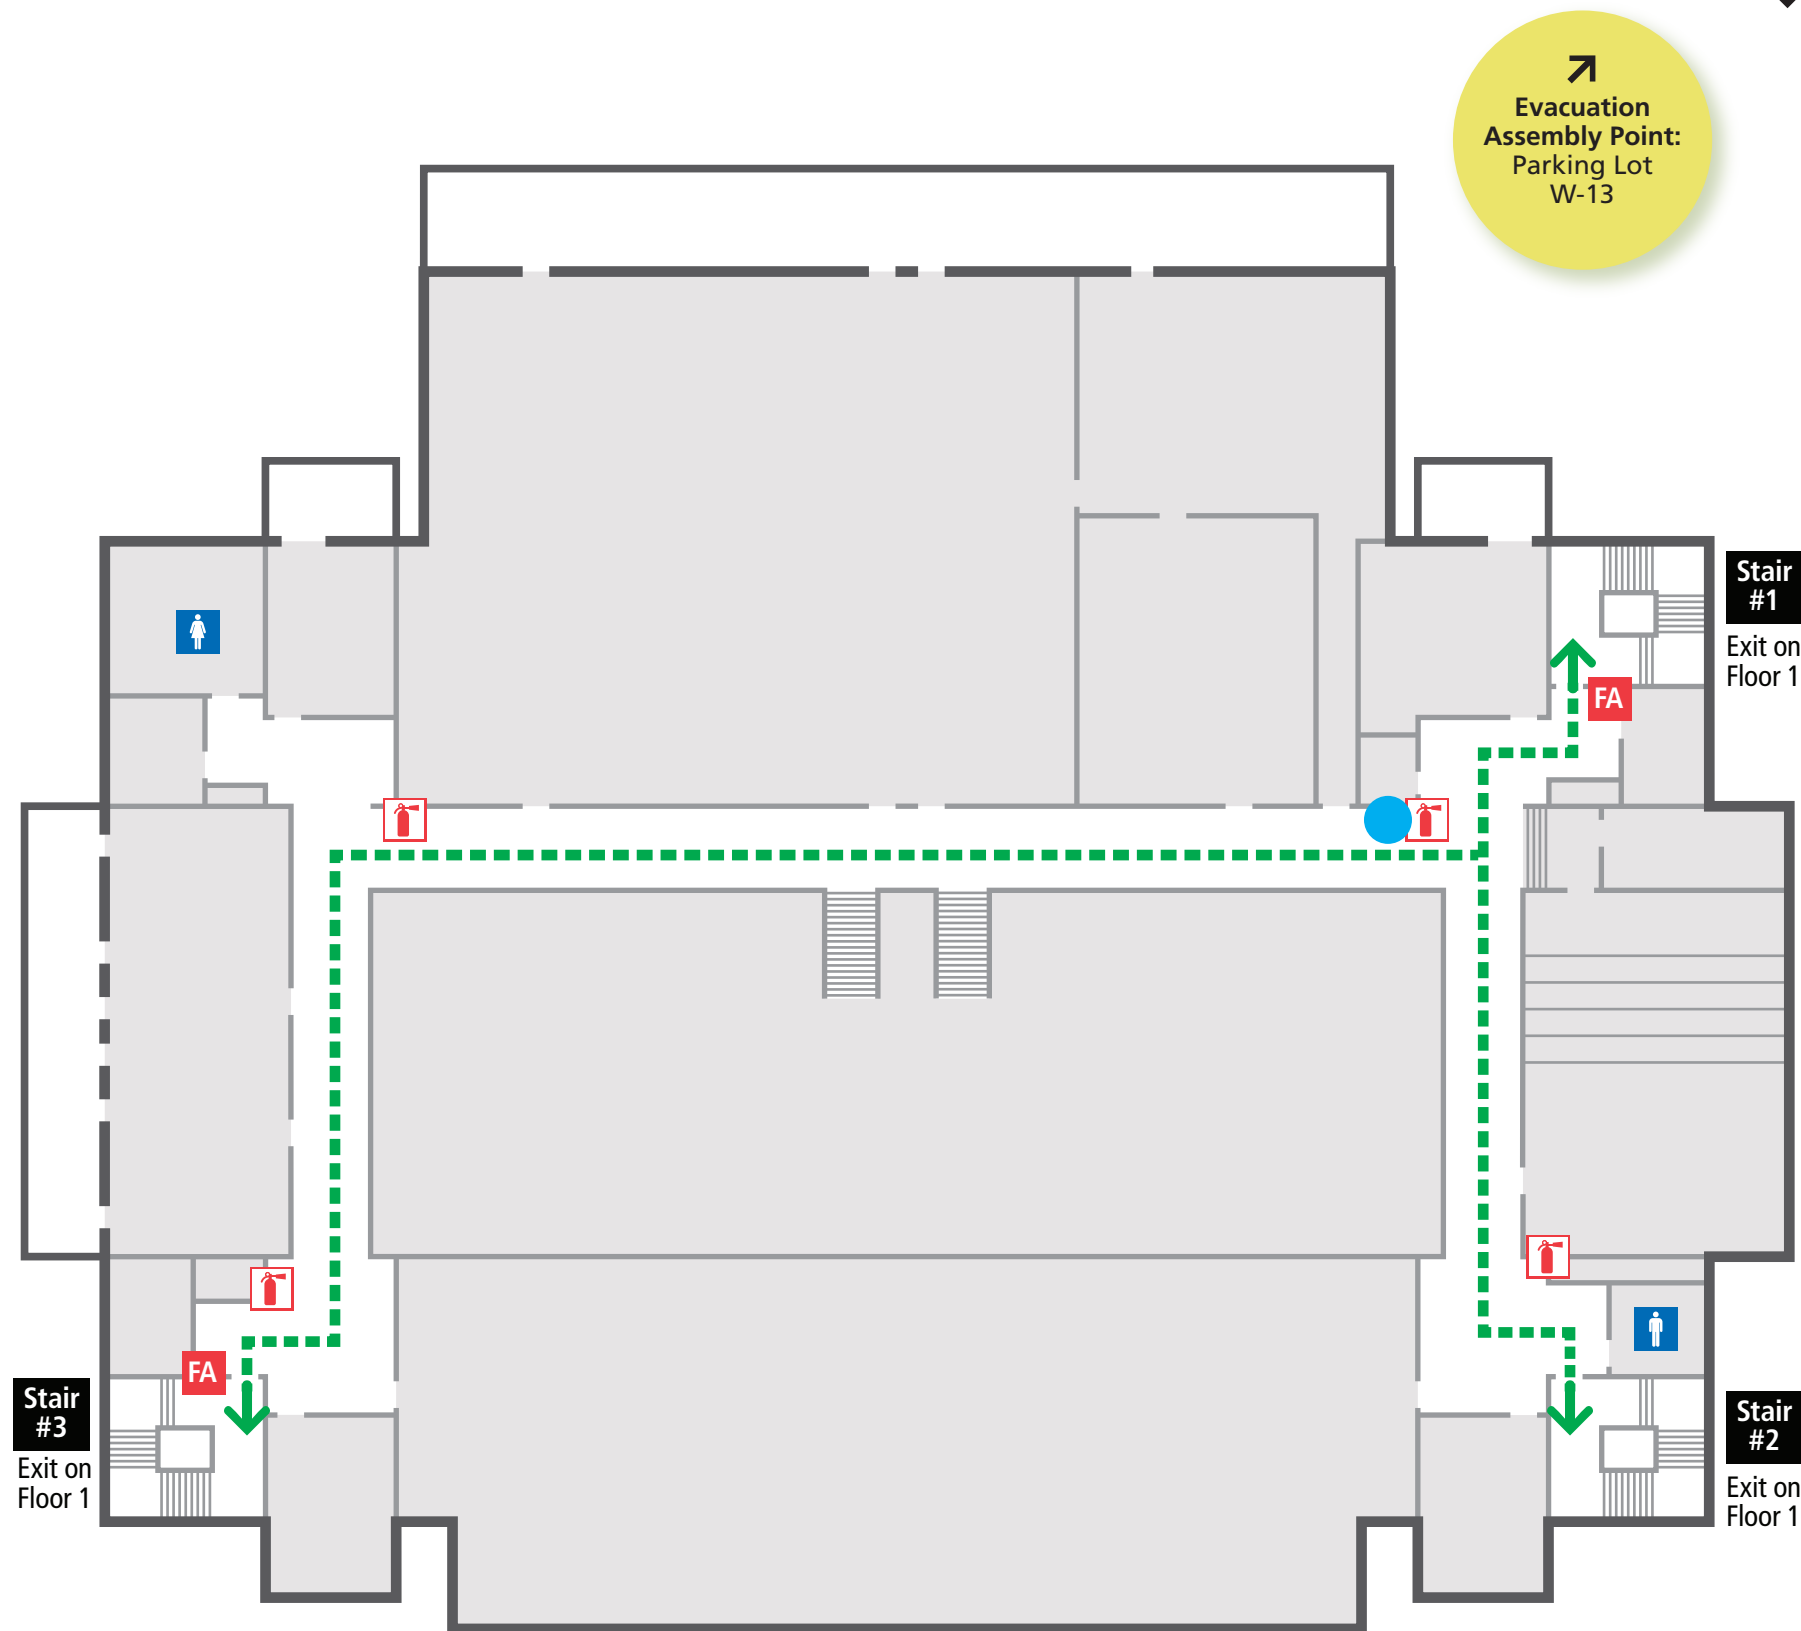


Plan Key

- You Are Here
- - - Evacuation Route
- ➔ Exit
-  Restroom
-  Fire Extinguisher
- FA Fire Alarm
- FACP Fire Alarm Control Panel
-  Symbol of Accessibility

In Case of Emergency:

- Sound fire alarm.
- Assist persons with disabilities.
- Exit the building using the nearest exit.
Do Not Use Elevators!
- Report to the nearest designated evacuation assembly point.
- Do not re-enter until authorized to do so.

FACP Fire Alarm Control Panel is located in Switch Gear Room #022 on Basement Level.

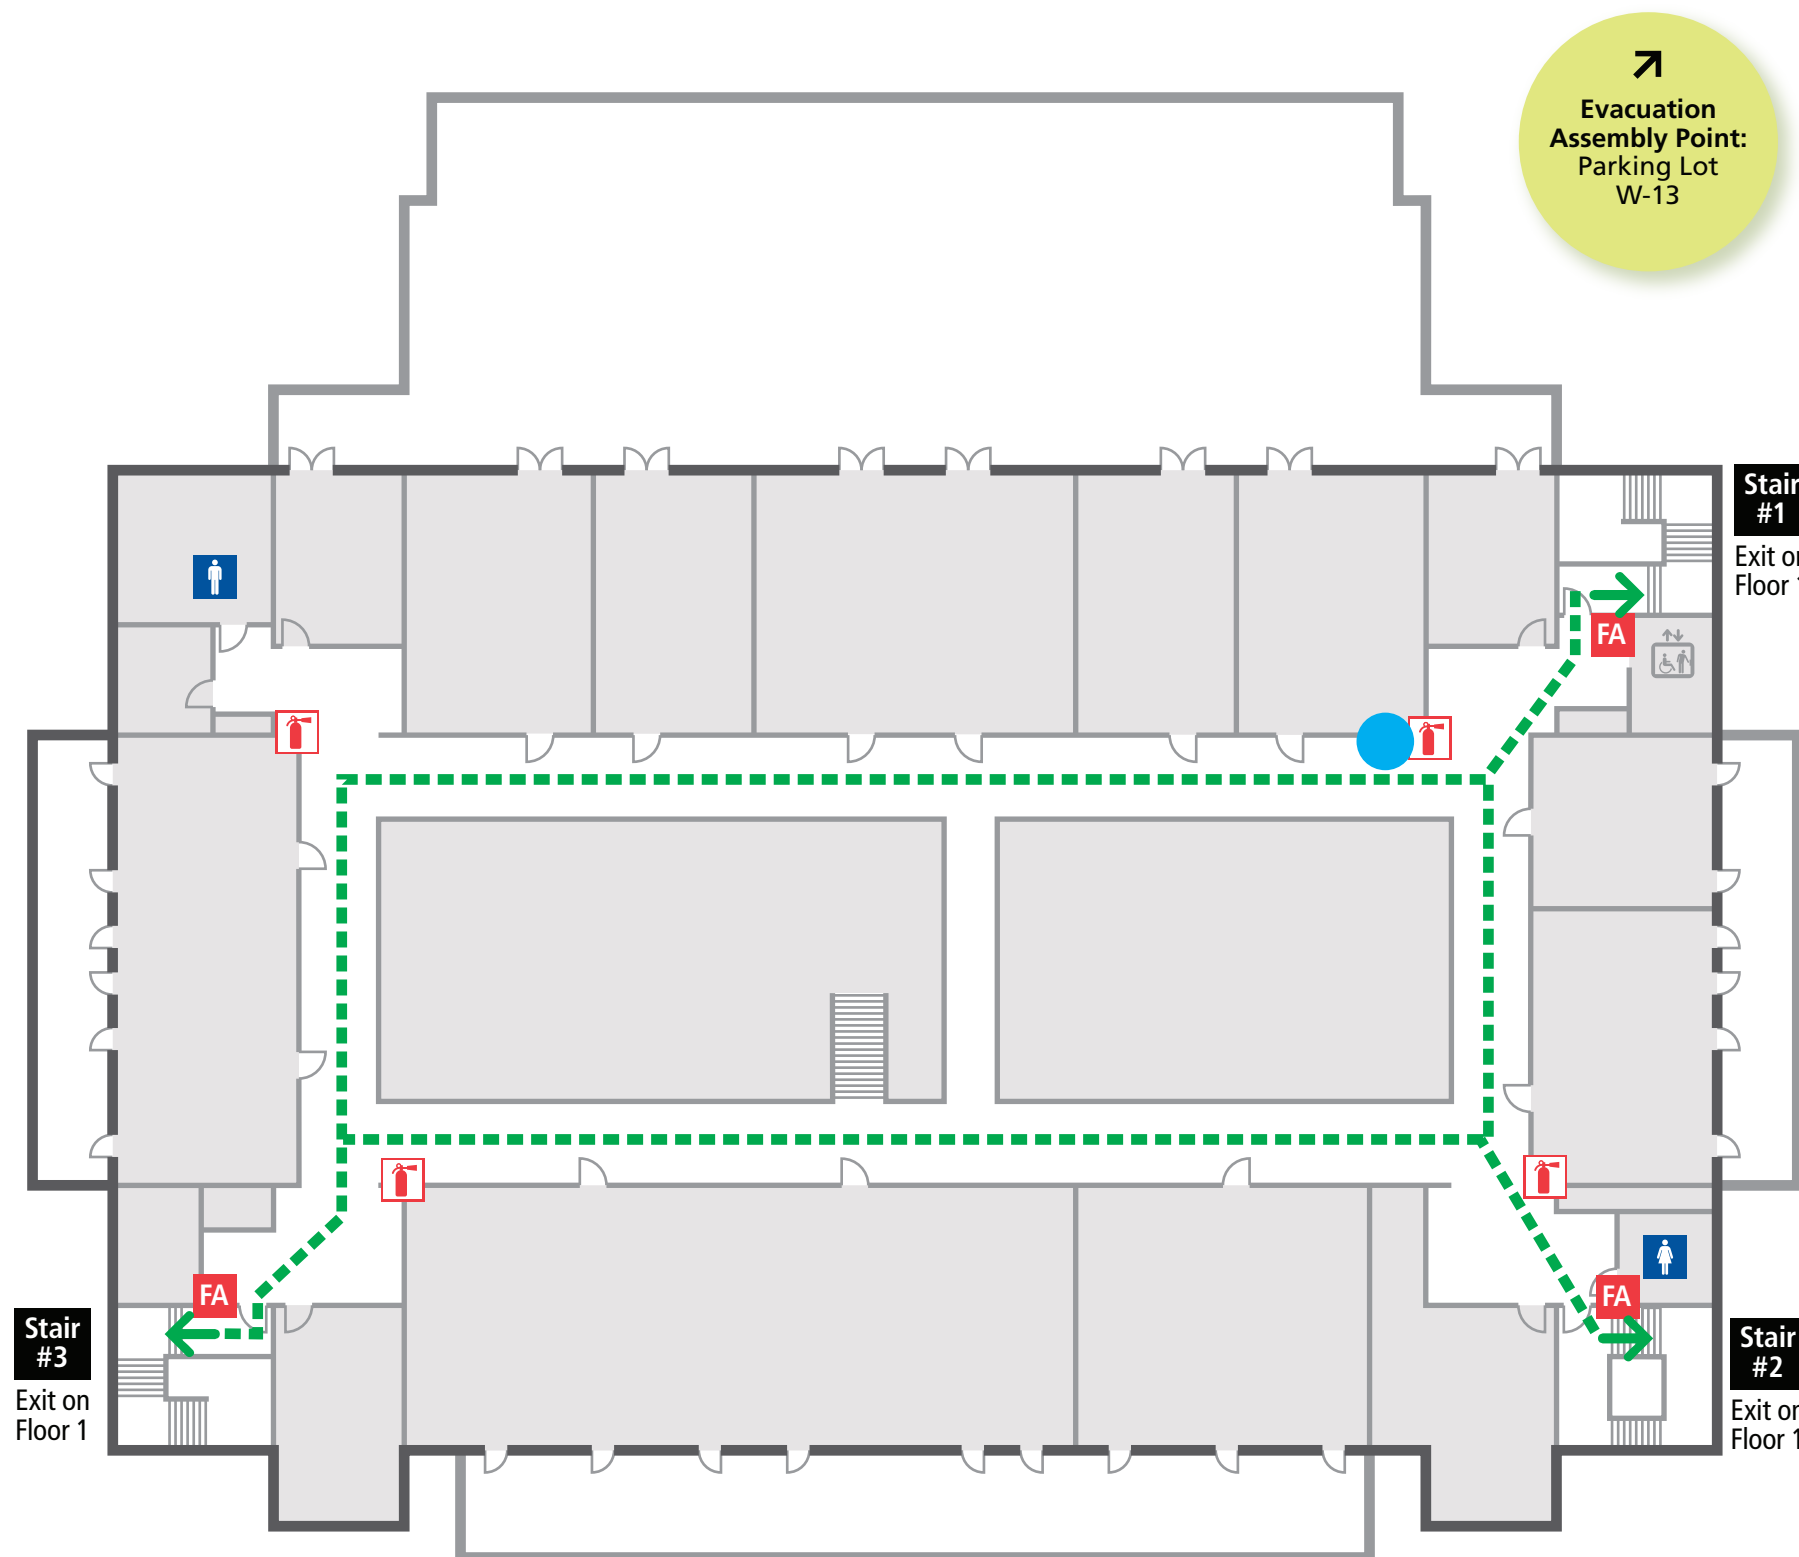


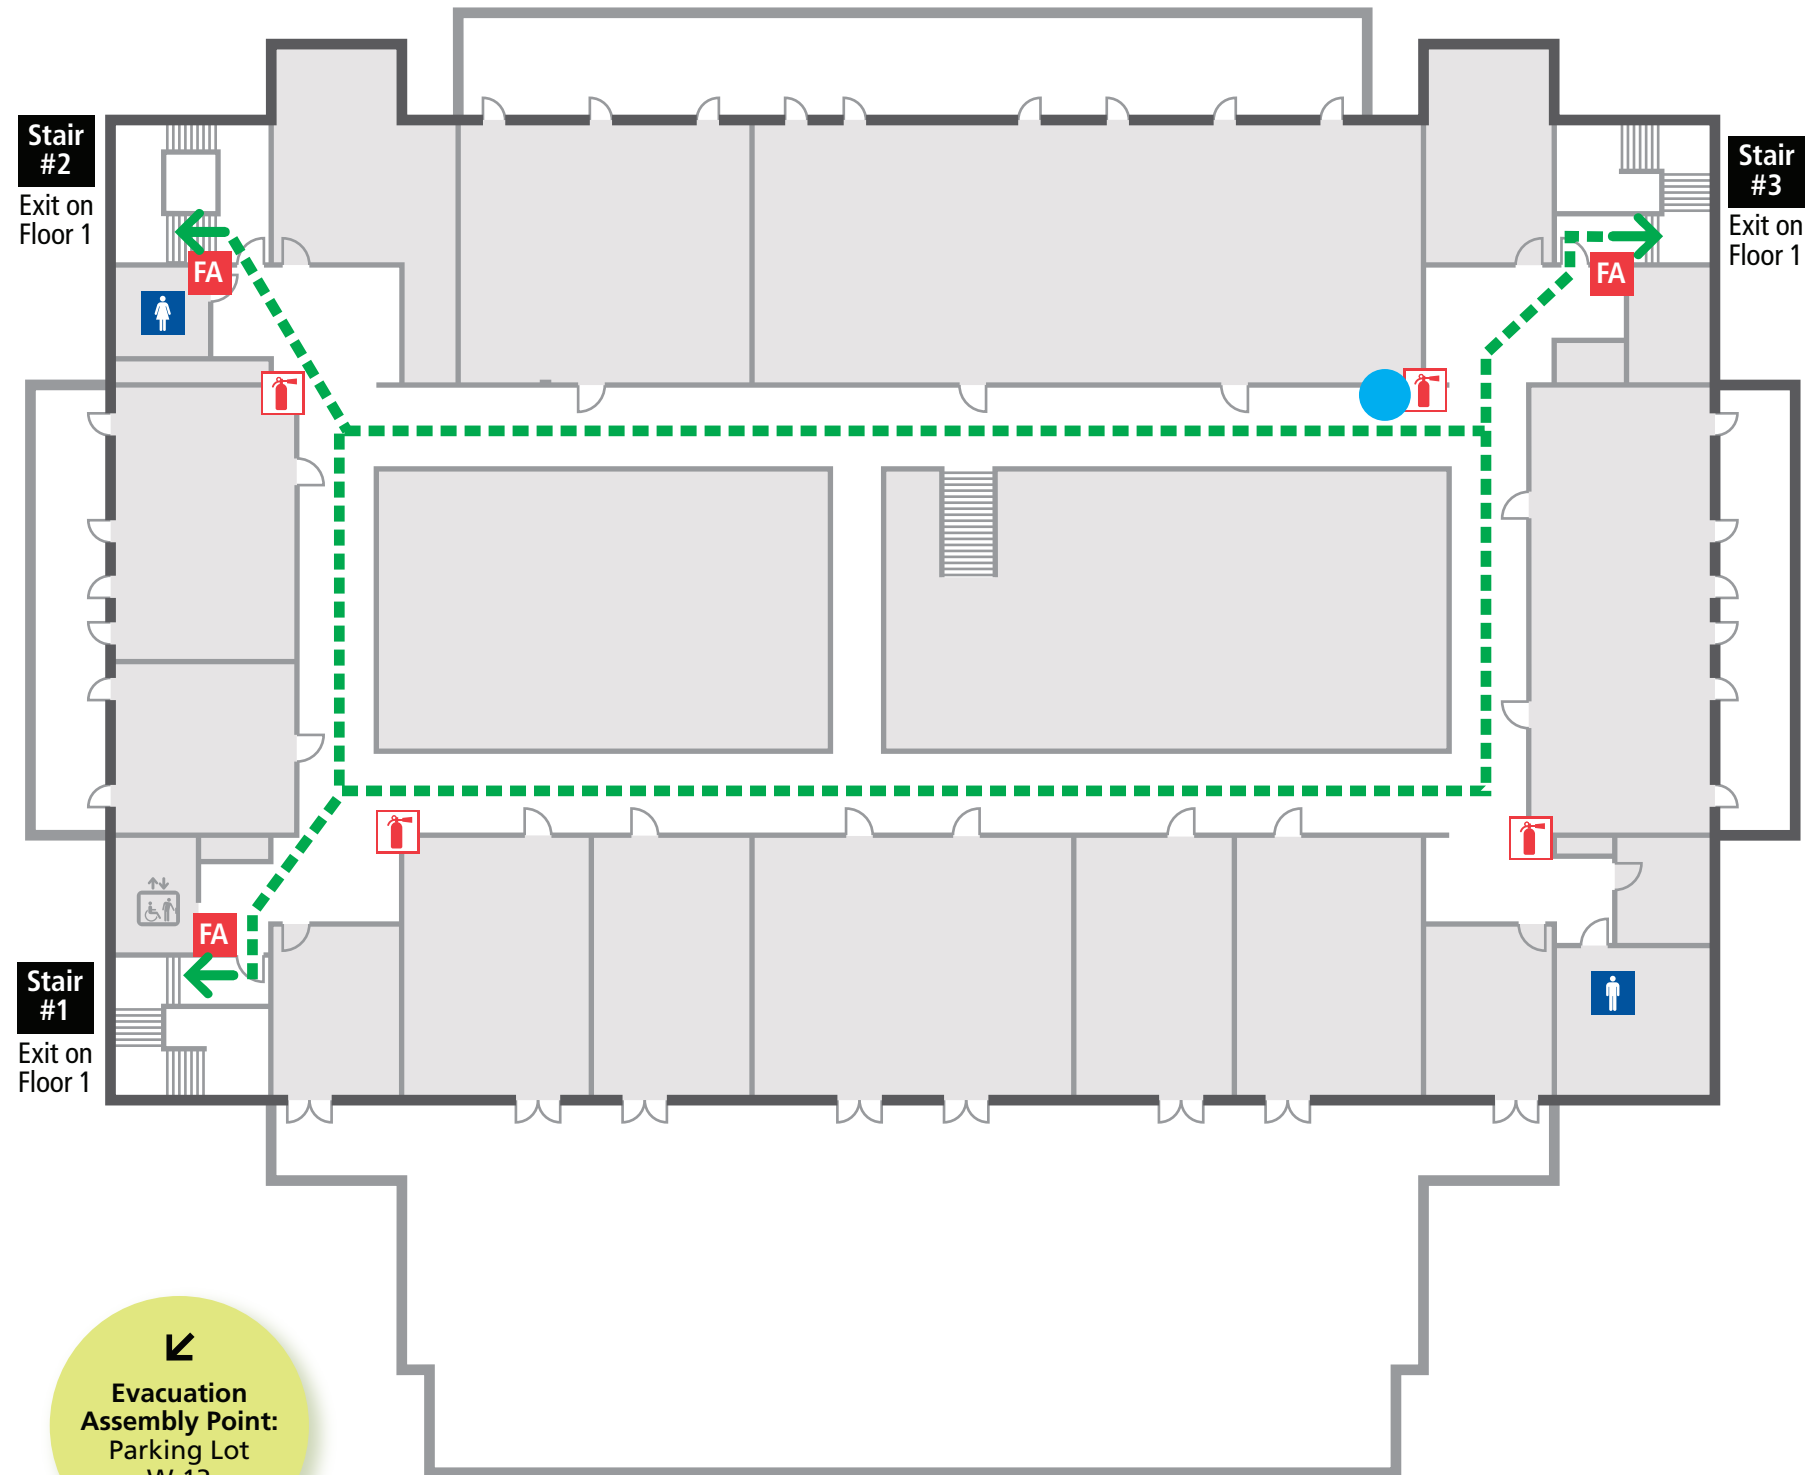
Plan Key


- You Are Here
- - - Evacuation Route
- ➔ Exit
-  Restroom
-  Fire Extinguisher
-  Fire Alarm
-  Fire Alarm Control Panel
-  Symbol of Accessibility

In Case of Emergency:

- Sound fire alarm.
- Assist persons with disabilities.
- Exit the building using the nearest exit.
Do Not Use Elevators!
- Report to the nearest designated evacuation assembly point.
- Do not re-enter until authorized to do so.

 Fire Alarm Control Panel is located in Switch Gear Room #022 on Basement Level.




**Evacuation
 Assembly Point:**
 Parking Lot
 W-13